


Kindertretlager

Das Kindertretlager kann sekundenschnell mit wenigen Handgriffen an- und abgebaut werden. Mit dem Kindertretlager können Kinder ab einer Größe von ca. 1,00 Meter auf dem Pino vorne mitfahren. Dies ermöglicht ihnen auch mit kleinen Kindern eine Radtour zu unternehmen. Der Clou, das Kind muß sich nicht länger im Anhänger oder auf dem Kindersitz langweilen, sondern ist voll integriert am Fahrgeschehen. Der freie Blick nach Vorn und das gemeinsame treten ist die Freude am Fahren.

Aufsetzen des Kindertretlagers:


So einfach geht's. Lösen Sie den Schnellspanner. Schieben Sie den Vorbau so weit in den Rahmen, bis die Kette deutlich sichtbar durchhängt (Bild rechts). Legen Sie dann das Kindertretlager entsprechend der Beinlänge Ihres Kindes auf den Rahmen auf. Verschließen Sie den Schließmechanismus des Tretlagers wie in der Abbildung unten links dargestellt. Wenn das Kindertretlager aufgesetzt und befestigt ist, legen Sie einfach die Kette über den Zahnkranz der Kinderkurbel und ziehen den Vorbau wieder heraus, bis die Kette gespannt ist. Achten Sie dabei darauf, dass die beiden Kurbeln gleich stehen und beide Kettenblätter die gleiche Zähnezahzahl haben (Bild unten rechts). Ist dies nicht der Fall können die Kurbeln kollidieren.

Ziehen Sie im Anschluss den Schnellspanner wieder fest. Die Demontage erfolgt in der umgekehrten Reihenfolge.

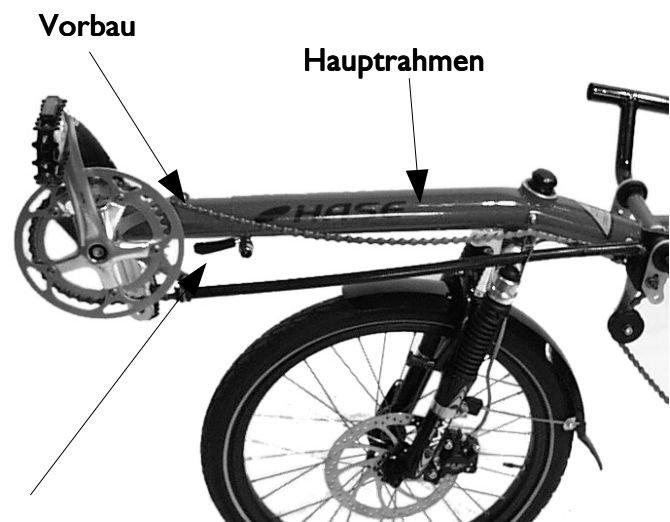

Schnellspanner

Die Kurbeln müssen in der gleichen Position stehen (Kollisionsgefahr)

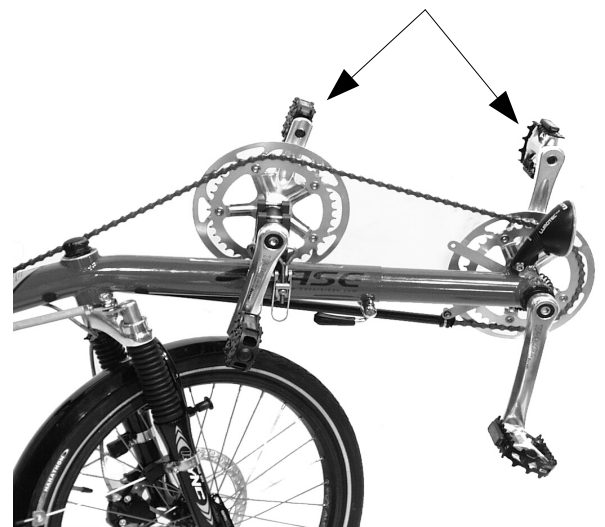

Kindertretlager Pino Montage

Lieferumfang:

Tretlager, Schleifblock
Führungsbügel und Anschlaggurt




Vorbereitende Arbeiten:

Um Ihr Pino auf das Kindertretlager vorzubereiten, müssen Sie das obere der beiden Teflonrohre entfernen. Dazu müssen mit einem 8mm Schlüssel die Mutter der Teflonrohrklemme abschrauben. Dann muß die Kette geöffnet werden. Hierzu wird ein Kettennieder benötigt. Lassen Sie die Arbeit ggf. von Ihrem Fachhändler durchführen. Entfernen Sie das Teflonrohr und verschließen Sie die Kette sorgfältig.

Ihr Pino ist nun soweit vorbereitet, dass das Kindertretlager jederzeit und ohne Werkzeug an und abgebaut werden kann.

5 mm Mutter

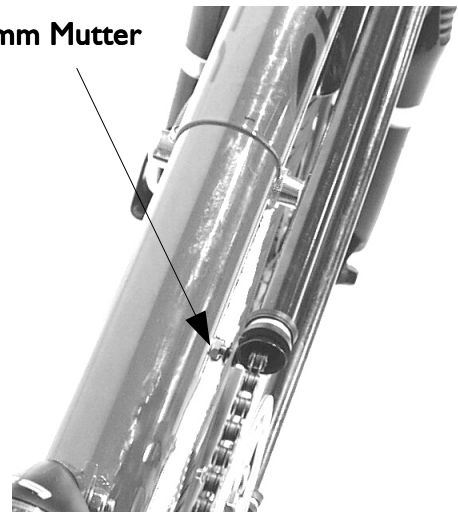

Bügel



Schleifblock

Rollen

Schrauben Sie den Kettenführungsbügel an das Steuersatzrohr und vergewissern Sie sich, ob Rollen und Führung in einer Linie zueinander stehen. Somit ist gewährleistet, dass die Kette weiterhin gerade läuft. Desweiteren muß der Schleifblock montiert werden, dazu muß der komplette Sitz entfernt werden, um den Block auf die Querstrebe des Rahmens zu schieben.

Ausschließliche Nutzung des Kindertretlagers:

Bei längeren Touren oder ausschließlicher Nutzung des Kindertretlagers empfiehlt es sich, die Kette nicht über den Schleifblock, sondern unter der Rolle entlang zu legen. Der Gebrauch ohne das Kindertretlager ist dann allerdings ausgeschlossen.

Kidsbottom bracket Pino




Kids bottom bracket

In order to prepare your Pino for the Kids bottom bracket you must remove the upper of the two teflon pipes. Therefore you have to remove the teflon tubing clamp with a 8mm. Then the chain must be opened. For this a Chaintool is needed. If necessary let the work be done by your specialist dealer. Remove the teflon pipe and tighten the chain carefully again. Your Pino is now prepared for the Kids bottom bracket can be taken on and off at any time without tools.


Put the Kids bottom bracket on:

Loosen the quick-release. Push the front boom in, until the chain visibly sags (picture right). Put the Kids bottom bracket on according to the leg length of your child. Lock the quick releases as shown in the illustration at the bottom left hand corner. If the Kids bottom bracket is attached, simply put the chain on the child crank and pull the front boom out again, until the chain is strained. Make sure that the two cranks are parallel and the number of teeth of the two chainrings are the same. (picture lower right). Tighten the the quick-release fastener again. The disassembly takes place in the reverse order: loosen the quick release, take off the kids bottom bracket, pull out the front boom and close the quick release again.

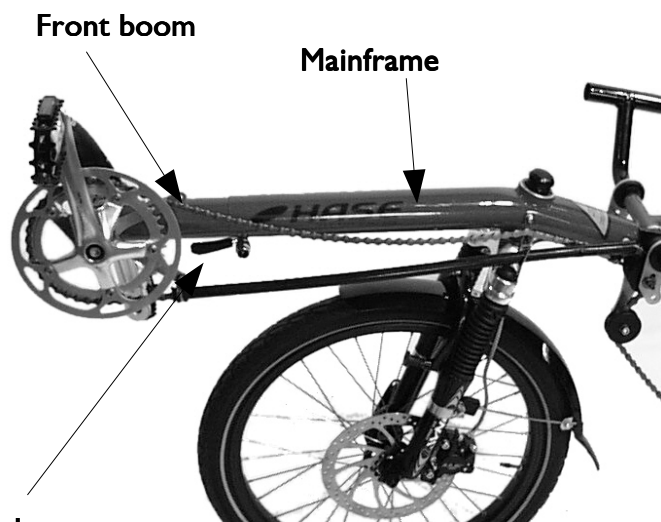

Quickrelease

The Crank has to be in the same Position to avoid that they collide

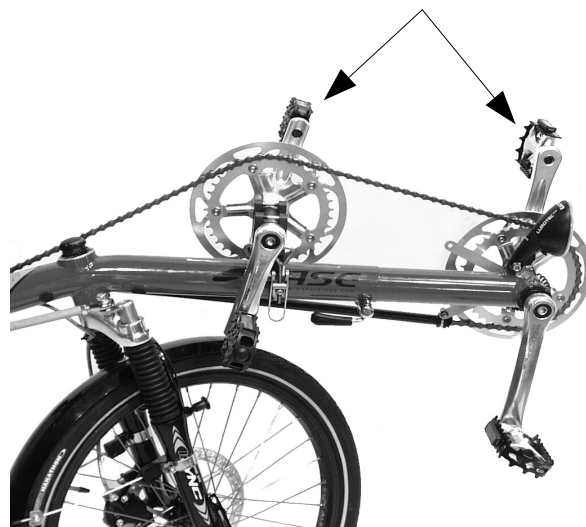

Kidsbottom bracket Pino Installation

Delivery:

Bottom bracket, deflector plate, shackle and suspender belt (these should be in the delivery)




Preparing the Pino for the kids bb:

In order to prepare your Pino for the Kids bottom bracket you must remove the upper of the two teflon pipes. Therefore you have to remove the teflon tubing clamp with a 8mm. Then the chain must be opened. For this a Chaintool is needed. If necessary let the work be done by your specialist dealer. Remove the teflon pipe and tighten the chain carefully again. Your Pino is now prepared for the Kids bottom bracket. It can be taken on and off now at any time without tools.

5 mm Nut



Shackle

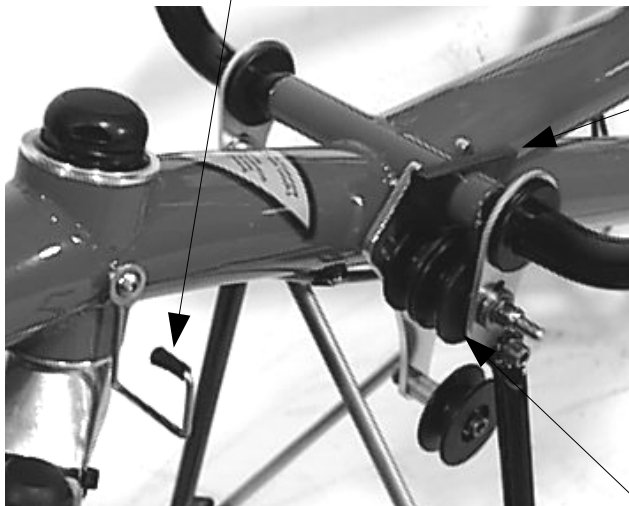

Deflector Plate

Bolt the shackle on the headtube and align the jockey wheels and the chain line so it runs straight. Then mount the black deflector plate. The Seat has to be taken off and the deflector plate put onto the tube that holds the Seat

Wheels

If you use the Kids bb permanently:

if you are to use the Kids bb permanently or if it is your only use, then the chain should not be run along the deflector plate.

It is advised to run it under the top jockey wheel, to have less friction and less noise.

Use without the kids bottom bracket is not possible in that case.